

# FLAIM Trainer™

## User Manual

---

June 2020

---



# Contents

|      |                             |    |
|------|-----------------------------|----|
| 1.   | Overview                    | 1  |
| 2.   | What's in the Box           | 3  |
| 3.   | Quick Start Guide           | 13 |
| 3.1  | Hardware Setup              | 13 |
| 3.2  | Tracking Hardware           | 13 |
| 3.3  | Instructor Viewing Hardware | 15 |
| 3.4  | The SCBA Set                | 16 |
| 3.5  | Hose Reel                   | 17 |
| 3.6  | The Nozzle                  | 17 |
| 3.7  | Half Facemask               | 18 |
| 3.8  | Heat Suit                   | 18 |
| 4.   | Turning the System On       | 19 |
| 5.   | Turning the System Off      | 22 |
| 6.   | Using the Instructor Tablet | 23 |
| 6.1  | Starting the Application    | 23 |
| 6.2  | Setup Tab                   | 24 |
| 6.3  | Room Setup                  | 24 |
| 7.   | Running a Scenario          | 27 |
| 7.1  | Select Training Mode        | 27 |
| 7.2  | Select Simulations Tab      | 28 |
| 8.   | After Action Review         | 30 |
| 9.   | Fault Finding               | 31 |
| 10.  | Battery Charging            | 34 |
| 10.1 | Main battery charging       | 34 |
| 10.2 | Tracker battery charging    | 34 |
| 10.3 | Nozzle battery replacement  | 35 |
| 10.4 | Nozzle Puck charging        | 35 |
| 10.5 | iPad Charging               | 35 |

|      |                                 |    |
|------|---------------------------------|----|
| 11.  | Safety                          | 36 |
| 11.1 | Travelling with Batteries       | 37 |
| 11.2 | Charging Batteries              | 37 |
| 11.3 | Weight                          | 37 |
| 11.4 | Reel/Hose line Forces           | 37 |
| 11.5 | Heat                            | 37 |
| 12.  | Maintenance                     | 38 |
| 12.1 | SCBA mask                       | 38 |
| 12.2 | Batteries                       | 38 |
| 12.3 | SCBA                            | 38 |
| 12.4 | Head Mounted Display (HMD)      | 38 |
| 12.5 | Heat Suit                       | 38 |
| 13.  | Travel Advice and Warnings      | 39 |
| 14.  | FLAIM Trainer Duo Setup         | 40 |
| 15.  | Adding New/Replacement Hardware | 41 |
| 15.1 | Connect hardware                | 41 |
| 15.2 | Re-pairing the tracking puck    | 41 |
| 16.  | Further Support                 | 42 |

|   |    |
|---|----|
| <b>Figure 1:</b> The FLAIM Trainer system                                     | 3  |
| <b>Figure 2:</b> Standard packaging for the FLAIM Trainer system              | 3  |
| <b>Figure 3:</b> Standard packaging of support components                     | 4  |
| <b>Figure 4:</b> Standard packaging of the SCBA, VR headset and half facemask | 5  |
| <b>Figure 5:</b> Standard packaging of the hose reel                          | 6  |
| <b>Figure 6:</b> Tracking system  | 13 |
| <b>Figure 7:</b> Tracking system showing plug locations                       | 13 |
| <b>Figure 8:</b> Typical configuration of training area                       | 14 |
| <b>Figure 9:</b> Trackers installed on tripods angled at ~30 degrees          | 14 |
| <b>Figure 10:</b> Instructor viewing hardware                                 | 15 |
| <b>Figure 11:</b> SCBA Main battery installation                              | 16 |
| <b>Figure 12:</b> Battery connected and secured                               | 16 |
| <b>Figure 13:</b> Connect the hose reel to a standard power socket            | 17 |
| <b>Figure 14:</b> Hose rewind and system power                                | 17 |
| <b>Figure 15:</b> Nozzle face showing batteries installed and tracking puck   | 17 |
| <b>Figure 16:</b> When installed, the puck should look like this              | 18 |
| <b>Figure 17:</b> Step 1. Power to hose reel                                  | 19 |
| <b>Figure 18:</b> Step 1 Connect two trackers                                 | 20 |
| <b>Figure 19:</b> Step 3. Ensure HDMI receiver is powered                     | 20 |
| <b>Figure 20:</b> Step 4. Power on SCBA Backpack - short press                | 20 |
| <b>Figure 21:</b> Step 5. Short press to power on nozzle puck                 | 21 |
| <b>Figure 22:</b> Step 6. Power on or wake instructor tablet                  | 21 |
| <b>Figure 23:</b> Instructor tablet home screen                               | 23 |
| <b>Figure 24:</b> FLAIM Trainer instructor software                           | 23 |
| <b>Figure 25:</b> Basic room setup configuration                              | 24 |
| <b>Figure 26:</b> Room Setup Step 1   | 25 |
| <b>Figure 27:</b> Room Setup Step 2   | 25 |
| <b>Figure 28:</b> Room Setup Step 3   | 25 |
| <b>Figure 29:</b> Room Setup Step   | 25 |
| <b>Figure 30:</b> Room Setup Step 5   | 25 |
| <b>Figure 31:</b> Room Setup Step 6   | 26 |

|   |    |
|---|----|
| <b>Figure 32:</b> Room Setup Step 7   | 26 |
| <b>Figure 33:</b> Room Setup Step 8   | 26 |
| <b>Figure 34:</b> Scenario Tab  | 27 |
| <b>Figure 35:</b> Select Training Mode Button                                   | 27 |
| <b>Figure 36:</b> Select Simulation Scenario Button                             | 28 |
| <b>Figure 37:</b> Select Teleport Mode and Select Heat Vest Mode Buttons        | 28 |
| <b>Figure 38:</b> Select Pump Pressure Button                                   | 28 |
| <b>Figure 39:</b> Analysis Tab  | 29 |
| <b>Figure 40:</b> After Action Review   | 30 |
| <b>Figure 41:</b> Main battery charger connection                               | 34 |
| <b>Figure 42:</b> Tracker batteries connect to charger                          | 34 |
| <b>Figure 43:</b> Nozzle batteries behind tracking puck                         | 35 |
| <b>Figure 44:</b> Nozzle puck charging via micro USB cable                      | 35 |
| <b>Figure 45:</b> FLAIM Trainer Dual remote control for switching video sources | 40 |
| <b>Figure 46:</b> SteamVR Software  | 41 |
| <b>Figure 47:</b> Looking for Tracking Puck and Paired!                         | 41 |

## 1. Overview

Welcome to the FLAIM community. Thank you for your purchase of the FLAIM Trainer™ virtual reality training system.

This manual should get you on your way in no time. It is designed for trainers with minimal understanding of virtual reality. The FLAIM Trainer system is not designed to replace hot fire training, but instead allows experiential learning through a number of practical scenarios developed to improve dynamic thinking, risk assessment, radio messaging, muscle memory, hose handling technique and nozzle control. Our system is designed so you can train people at all levels in your organisation from novice through to experienced firefighters. Giving you the ability to train and develop their skillset in a safe environment with immersive, repeatable and realistic fire scenarios.

The FLAIM Trainer can also be used to train the public in the dangers of fire and allow them to appreciate the work that you do.

FLAIM Trainer provides firefighters the capacity to train situations and scenarios that are:

- inherently unsafe and difficult to reproduce;
- no longer possible due to environmental, community and regulatory constraints;
- incur significant training cost in time, people and assets.

FLAIM Trainer places firefighters in the most realistic training scenario available by utilising several customised elements:

- **Head Mounted Display:** Breathing apparatus (SCBA) kit incorporates a head mounted virtual reality (VR) display.
- **Nozzle:** Hose-line system provides realistic jet or nozzle reaction force.
- **Heat Suit:** Heat Suit with heat generation components.

Once again, thank you for your support.

**The FLAIM Systems Team**

**Train more, learn more, prepare better.**

## 2. What's in the box?

This section covers the FLAIM Trainer system and what to expect when you open the box. It also lists the individual parts included and explains what they do.

**Figure 1:** The FLAIM Trainer system



**Figure 2:** Standard packaging for the FLAIM Trainer system


**Figure 3:** Standard packaging of support components



**Figure 4:** Standard packaging of the SCBA, VR headset and half facemask



**Figure 5:** Standard packaging of the hose reel

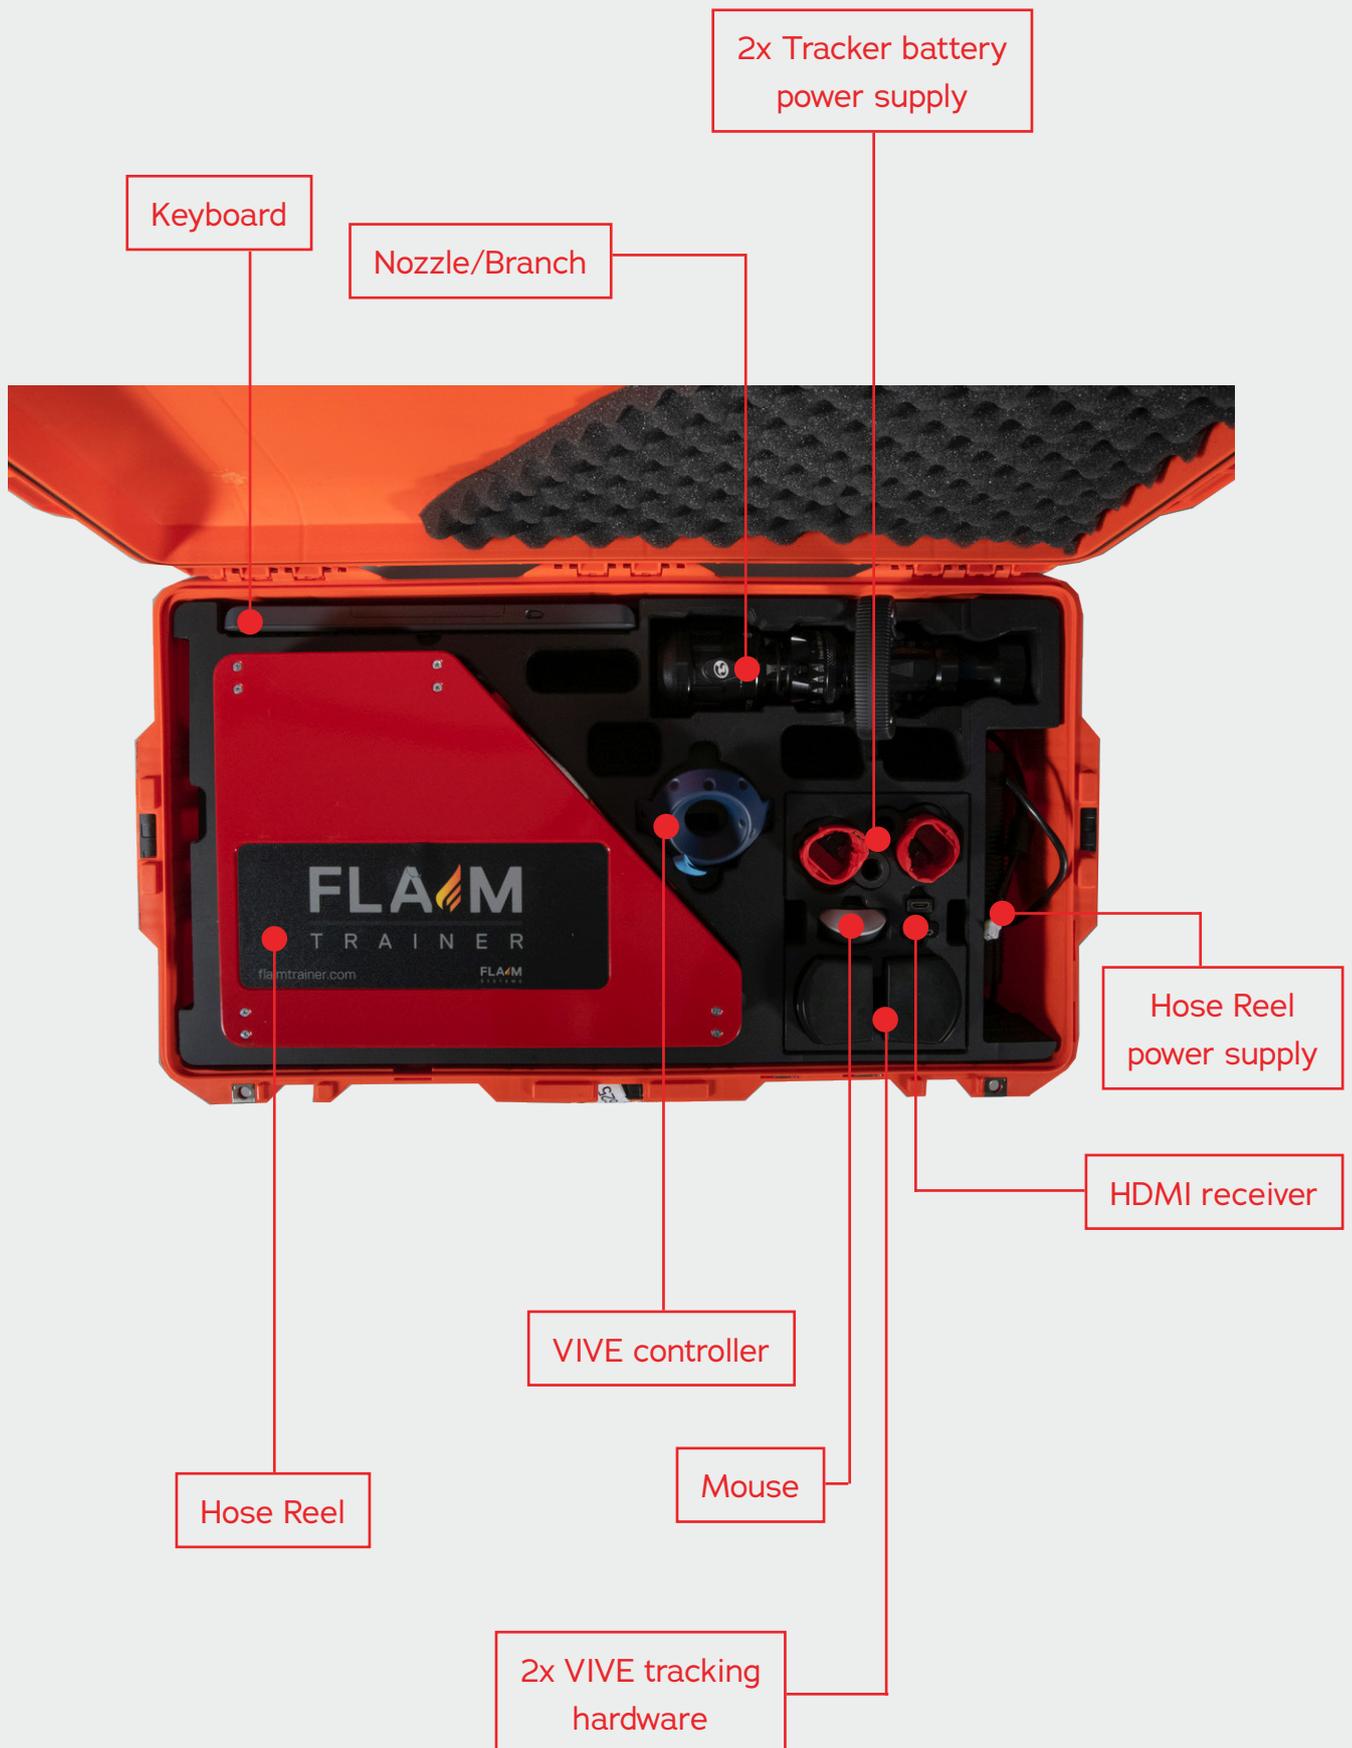

| QTY | Description                                 | Picture   |
|-----|---|---|
| 1   | SCBA including main computer and VR Headset |    |
| 1   | Heat Suit                                   |    |
| 2   | Tripod for mounting tracking hardware       |  |
| 1   | Force feedback Hose Reel                    |  |
| 1   | TFT G-Force Nozzle/Branch                   |  |

| QTY | Description   | Picture   |
|-----|---|---|
| 1   | Half face SCBA mask and lung demand valve                             |    |
| 1   | Instructor iPad   |    |
| 2   | VIVE tracking hardware  |  |
| 1   | VIVE Tracking - Puck  |  |
| 2   | Standard power cable for powering tracking hardware from battery bank |  |

| QTY | Description  | Picture   |
|-----|--|---|
| 1   | iPad charging cable                                  |    |
| 1   | USB cable for nozzle tracking puck charging          |    |
| 2   | Swivel mount for VIVE tracking hardware installation |  |
| 2   | Tracker batteries                                    |  |
| 2   | Tracker Battery – power source                       |  |

| QTY | Description  | Picture   |
|-----|--|---|
| 2   | Tracker Battery Adapters – brackets for power source                         |    |
| 1   | HDMI receiver  |    |
| 2   | Main SCBA batteries  |  |
| 1   | Mouse for user setup – initial<br>*Mouse may appear different to image shown |  |
| 1   | VIVE controller (for future AR instructor use)                               |  |

| QTY | Description  | Picture   |
|-----|--|---|
| 1   | USB Rapid travel charger (country specific) for charging VIVE controller, puck and iPad.                                   |    |
| 1   | Milwaukee battery charger for both tracker batteries and main SCBA battery charging (country specific power plug supplied) |    |
| 1   | Instructor and upgrade keyboard (not used in general operation)  |  |
| 1   | Hose Reel Power Supply   |  |
| 2   | VIVE Tracker room mounting hardware  |  |

| QTY | Description                                       | Picture   |
|-----|---|---|
| 1   | Country specific Hose Reel power cable            |    |
| 1   | USB VIVE controller and HDMI Receiver power cable |    |
| 1   | HDMI extension cable                              |  |

## 3. Quick Start Guide

This section covers the basic setup, use and running of the FLAIM Trainer system.

### 3.1 Hardware Setup

The hardware consists of a number of support components that must be installed before training can commence. This section covers the placement and installation of all tracking hardware and instructor television (or projector) monitoring equipment.

### 3.2 Tracking hardware


Tracking is achieved using the VIVE lighthouse system from HTC. A pair of trackers are installed that define the maximum training space allowable for the user to train in. At present the system supports a training area of 6 x 6m ~(20 x 20ft) or a total distance between the two trackers not greater than about 7m (23ft).

This training area should be cleared of all furniture, not contain large mirrors or highly reflective surfaces and should not be in direct sunlight. The tracking system used by FLAIM Trainer relies on Infrared Light (IR) and tracking performance can be degraded in certain conditions.


Each tracker is assembled as per the following figures.

As shown in **Figure 7**, the tracking system is plugged into the power receptacle. Once assembled, the system can be placed into position at diagonal corners of the training space and powered on (by connecting the battery to the system).

**Figure 6:** Tracking System

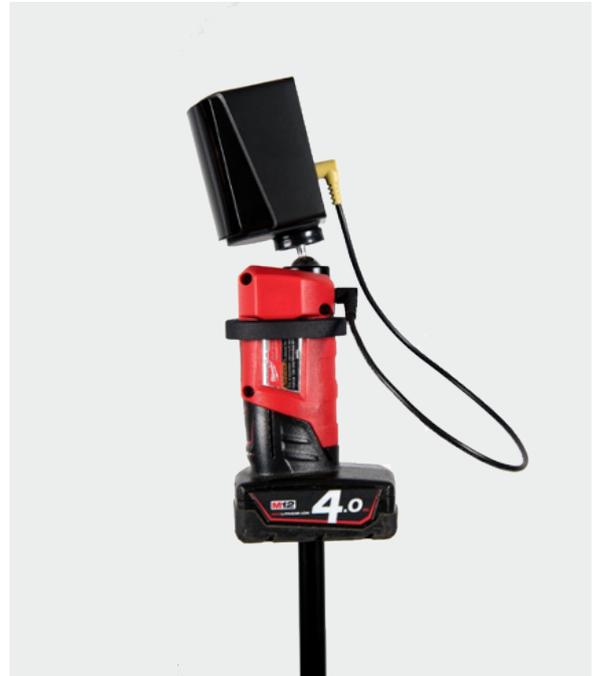

**Figure 7:** Tracking system showing plug locations

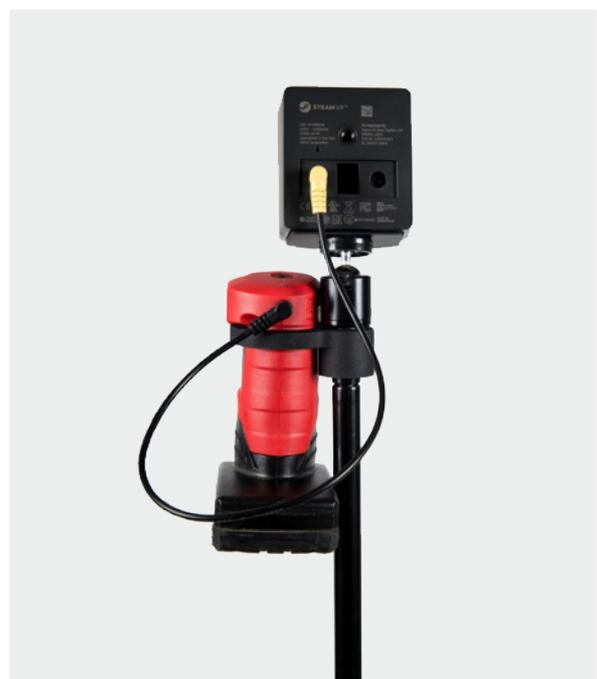


Please ensure that there is at least one red light (out of a possible 4) on the power adaptor before beginning a scenario.

The trackers should be placed at diagonal corners of the training space at a height of ~2m (6ft). The sensor face should be angled down at an approximately 30-degree angle as shown in **Figure 9**.

**! Note**

When installed and powered on, both trackers should show a power led on the front window.

**Figure 8:** Typical configuration of training area

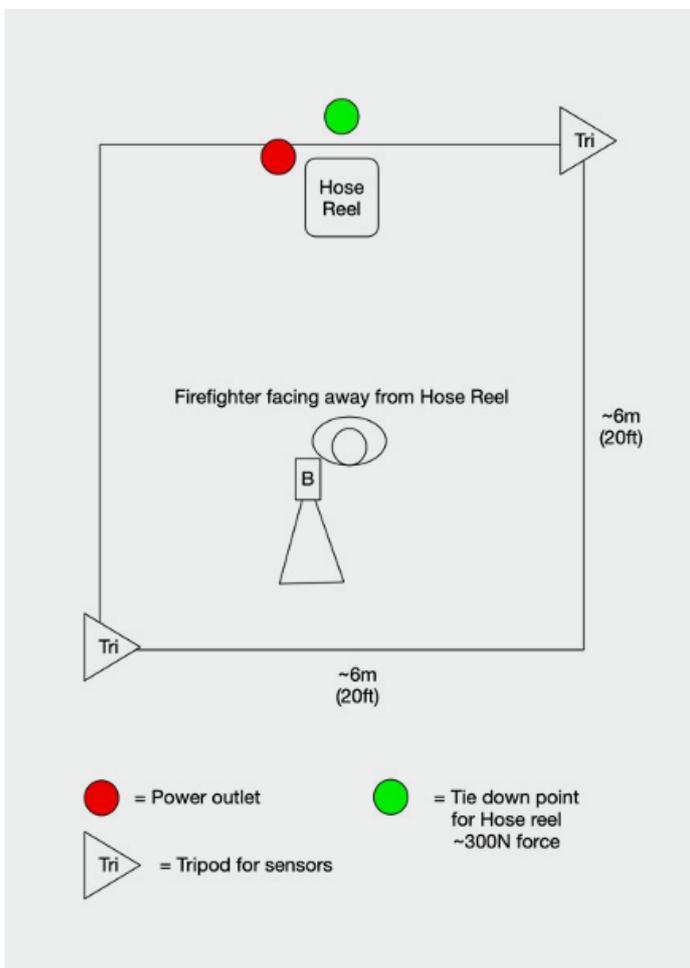

**Figure 9:** Trackers installed on tripods angled at ~30 degrees



### 3.3 Instructor viewing hardware

In addition to the tracking hardware, the instructor viewing hardware must also be installed. This hardware receives the signal transmitted by the FLAIM Trainer SCBA so that the instructor and/or fellow trainees can view live footage from the training environment. This hardware is crucial for first time setup of the tracking environment.

The instructor viewing hardware consists of a HDMI receiver that connects to a television/projector (not supplied) via a supplied HDMI cable (**Figure 10**).

Power is supplied to the HDMI receiver from the included USB Power supply or by plugging the attached micro USB lead into the USB port on most newer televisions and projectors.

The system is a commercial unit and has been trialled with a number of televisions and projectors with great success. Some systems cannot supply enough power from their in-built USB port and it is suggested to use the included power supply in this instance.

When powered, the receiver power light will glow blue.

**Figure 10:** Instructor viewing hardware



### 3.4 The SCBA set

The SCBA set is a self-contained virtual reality computer with built-in head mounted display.

The system is powered by a high-capacity lithium power tool battery installed within the cylinder.

The main system battery is installed by clipping the battery into the lower half of the SCBA cylinder.

**Figure 11:** SCBA Main battery installation



**Figure 12:** Battery connected and secured



## 3.5 Hose reel

The hose reel system provides nozzle reaction force to the user but also contains the wireless syncing hardware to enable the system to operate.

The hose reel requires a power connection (**Figure 13**) and is supplied with a country specific IEC lead (standard computer lead). If operating correctly, a system power light will show under the 'Hose Rewind' button above the power connection (**Figure 14**).

The hose reel also requires a solid connection to an immovable object to provide force feedback to the trainee. The supplied line can be used to lash to an object generally in excess of 25kg (50lb).

## 3.6 The Nozzle

Now that the SCBA set, tracking hardware, hose reel and instructor monitoring have been configured. It's time to connect a tracking puck to the nozzle. The tracking puck is magnetically attached to the front of the nozzle and keyed into place firmly. Once attached, the puck is turned on by briefly depressing the power button for one second (**Figure 15**).

### **!** Note

Important this button is not held down or double pressed or the puck will need to be re-paired (refer section 14.1).

**Figure 13:** Connect the hose reel to a standard power socket



**Figure 14:** Hose rewind and system power



**Figure 15:** Nozzle face showing batteries installed and tracking puck



The batteries in the nozzle (2 x AAA) should last a month or more of continuous use. Please remove the tracking puck when not in use and store separately as this will optimise battery life. These two batteries are the only user replaceable batteries in the FLAIM Trainer and should be recycled appropriately.

The tracking puck also contains an internal battery. This is charged by plugging a USB cable into the charging port on the base of the puck. See the charging section of this manual.

**Figure 16:** When installed, the puck should look like this



### 3.7 Half facemask

The half facemask is used to capture respiration information from the user as well as to overlay the sounds of breathing through a standard positive pressure SCBA. Simply connect the facemask to the connector on the right-hand shoulder strap of the SCBA and adjust the straps on the face prior to putting on the VR headset. Metrics are reset on each scenario launch and can be viewed in the 'Monitor' tab on the iPad user interface.

### 3.8 Heat suit

Heat suits are supplied pre-paired to SCBA sets. Heat suits are worn over a t-shirt or similar and are designed to be worn underneath the firefighter's standard personal protective clothing.

To turn on the heat suit, simply connect the supplied power cable to the magnetic connector on the top of the SCBA cylinder. The suit will automatically power on and connect to the SCBA. In the software on the iPad, 'Heat On' must be selected for the suit to generate heat.

The suit will automatically regulate heat zones - proportional to the position and orientation of the firefighter to the fire in the virtual scenario. Not all scenarios generate the signals required for the heat suit to operate. Contact FLAIM Systems for a list of heated scenarios or to add functionality.

## 4. Turning the system on

Congratulations!  
The system hardware  
is now assembled and  
you're ready to begin  
using the system.

The order of turning on the system is not absolutely critical; however, it is best to follow the below steps to ensure fault finding is easier if you experience problems.

For guidance, refer to the following figures for the locations of all power buttons and switches.

### Step 1.

Turn on/ensure the hose reel power supply is on and the power light is green.

**Figure 17:** Step 1. Power to hose reel



### Step 2.

Connect the tracker batteries, ensuring that there is sufficient charge.

**Figure 18:** Step 2. Connect two trackers



### Step 3.

Turn on/ensure the HDMI receiver is connected (making sure the power-light is blue).

**Figure 19:** Step 3. Ensure HDMI receiver is powered



### Step 4.

Turn on the SCBA backpack (short press to power button).

**Figure 20:** Step 4. Power on SCBA Backpack - short press- short press



### Note

Reminder -Single press only for waking tracker. A double press may put the puck into pairing mode and requires re-pairing to the system (see adding hardware in section 14.1).

## Step 5.

Turn on the nozzle puck (single press of power button).


**Figure 21:** Step 5. Short press to power on nozzle puck



## Step 6.

Wake up/turn on the iPad.

**Figure 22:** Step 6. Power on or wake iPad.

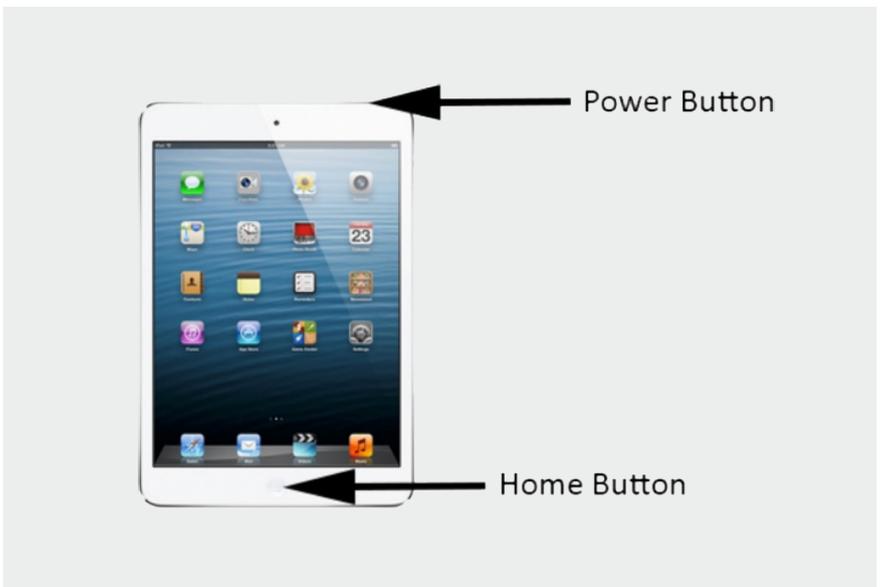

## Step 7.

Connect the heat suit to the SCBA set via magnetic connector.

## ! Note

If when waking up the tablet the instructor software is still shown, please close and re-open the software by double clicking the home button and swiping up to close the currently running program or by relaunching the application from the home screen. This is also required when re-starting the SCBA system.

## 5. Turning the system off

To turn the system off, work backwards through steps in section 4. Powering off.

### Note

All of the individual battery powered components will automatically turn themselves off when their battery level is depleted to protect the batteries. If the system does not turn on, shows a low battery indicator or does not function as expected. Please follow the battery charging steps in section 9.

## 6. Using the iPad

### 6.1 Starting the application

The instructor tablet is an Apple iPad. The iPad is the main interface for controlling all aspects of the simulation after initial hardware setup.

Once awake or turned on, the iPad screen should look like **Figure 23**.

If the iPad shows anything else, it's best to double tap the home button and close any open applications by swiping the active application up.

See <https://youtu.be/OpTAM3Cgs-I> for a video of the process if unfamiliar with the Apple iOS.


Once the home screen is shown and the SCBA system is powered on (after 30+ seconds) the instructor software can be launched by pressing on either FLAIM Trainer button on the screen.

When launched, the FLAIM Trainer Instructor station currently look like **Figure 24**.

**Figure 23:** Instructor iPad home screen



**Figure 24:** FLAIM Trainer instructor software

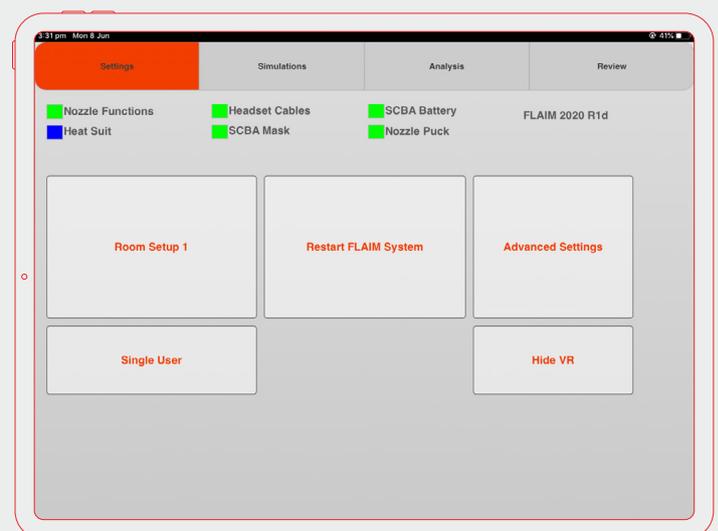

A single row of tabs across the top of the user interface allows full control of the FLAIM Trainer System in both single user mode and multi-user mode.

## 6.2 Setup Tab

The default tab when launching the FLAIM Trainer software on the iPad.

Allows a user to:


1. **Restart the Nozzle:** useful for when the nozzle is unresponsive or not connected. This button can be pressed any time and the nozzle connector will usually connect within 10 seconds.
2. **Room Setup:** used to configure a new room space on first start up in a new location (see below)
3. **HideVR:** used to hide the standard SteamVR window.

## 6.3 Room Setup

The following section shows an operator how to calibrate the system to the environment for the first time. This setup needs to be run when the system is first installed in a new location or the trackers have been moved for any reason.

For a room setup to be successful, the SCBA should be placed in the room as defined by the two trackers with the VR headset facing the 12 o'clock position with the hose reel at the 6 o'clock as shown in **Figure 25**.

**Figure 25:** Basic room setup configuration. The position and orientation of the SCBA set is not important, just that the headset is facing to the front of the room when the hose reel is behind you

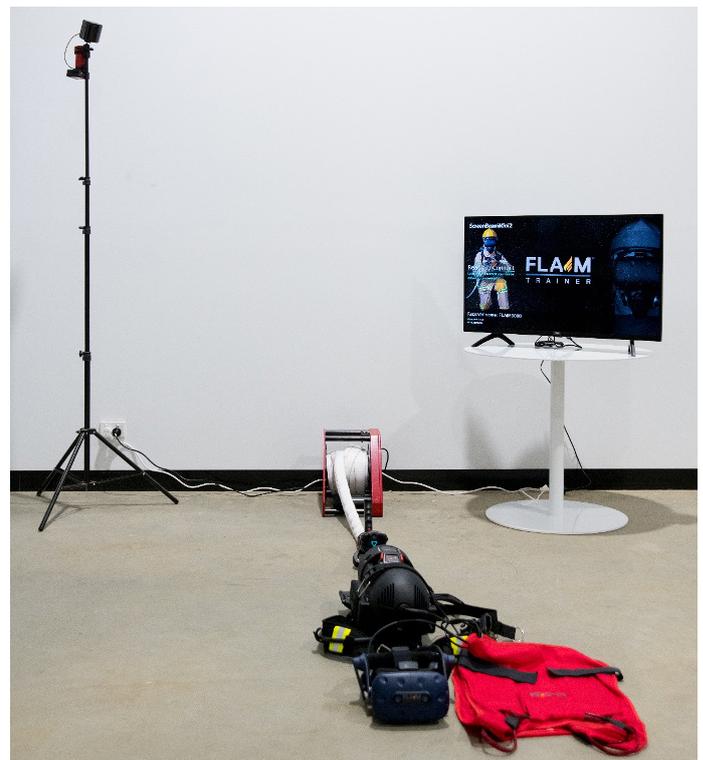

**Figure 25** shows the base of one of the tracker tripods. In this room, tracker 2 is at the bottom right of picture (out of frame).

## Step 1.

The TV or projector should be showing an image such as shown in Figure 26.


**Figure 26:** Room Setup Step 1



## Step 2.

On the instructor iPad, press 'Room Setup' (button 1 in Figure 24). This will launch the VR room setup utility as shown in Figure 27. From here you will need the mouse included in the box to progress through the steps below. This is the only time you will use the mouse in general operation of the FLAIM Trainer. Click 'Standing only' for general operation.


**Figure 27:** Room Setup Step 2

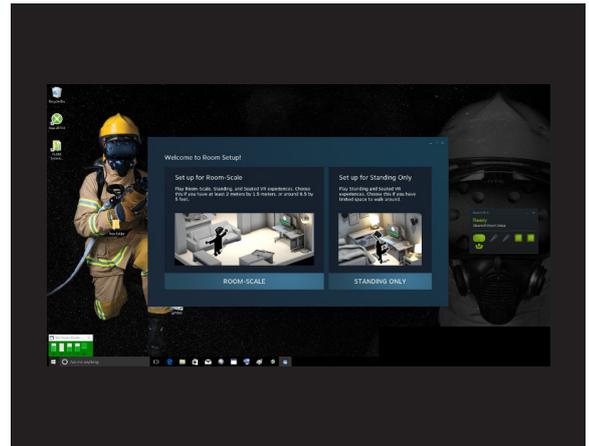

## Step 3.

When the screen looks like Figure 28 you can click 'NEXT' with the mouse.


**Figure 28:** Room Setup Step 3

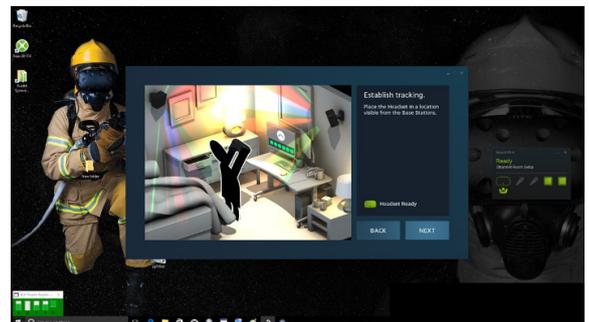

## Step 4.

When the screen looks like Figure 29 you can click 'Calibrate Center' with the mouse.


**Figure 29:** Room Setup Step 4

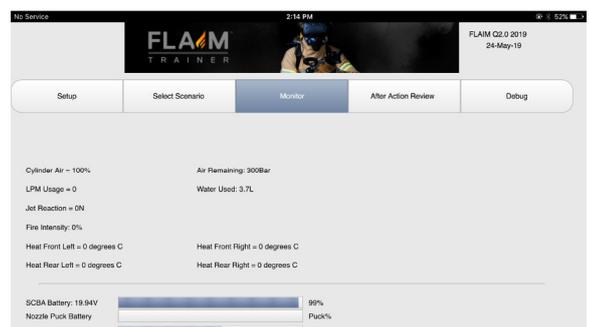

## Step 5.

When the screen looks like Figure 30 you can click 'NEXT' with the mouse.


**Figure 30:** Room Setup Step 5

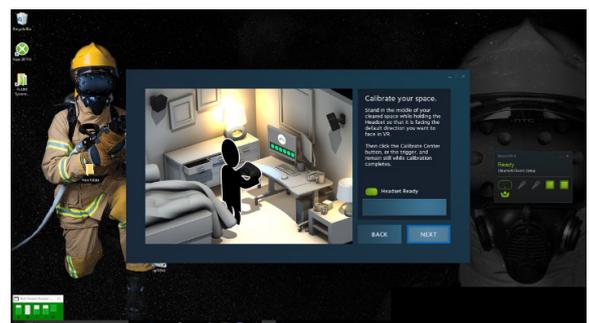

### Step 6.

When the screen looks like Figure 31 you can click 'Calibrate floor' with the mouse. Note that as the headset is on the floor you do not need to enter a height in the field.


**Figure 31:** Room Setup Step 6

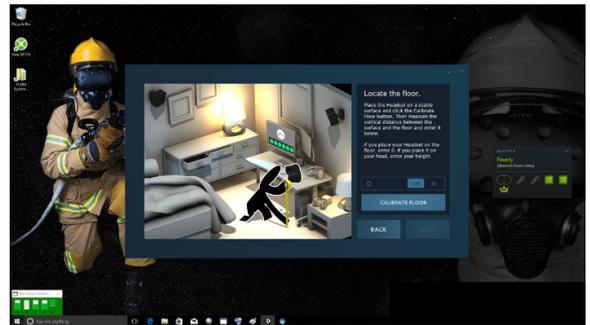

### Step 7.

When the screen looks like Figure 32 you can click 'NEXT' with the mouse.


**Figure 32:** Room Setup Step 7

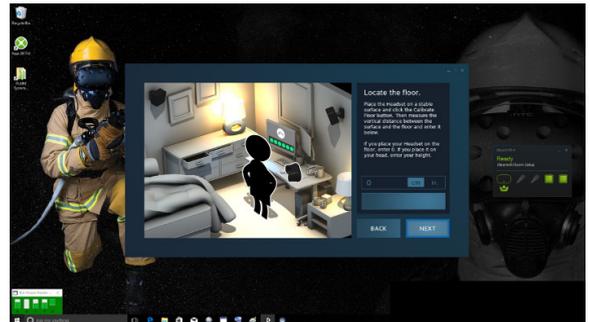

### Step 8.

When the screen looks like Figure 33 you can click 'NEXT' with the mouse. This will automatically close the room setup utility and you're ready to run a scenario!

**Figure 33:** Room Setup Step 8

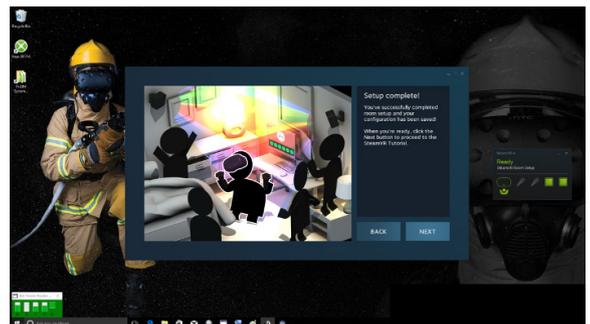

### Step 9.

Click 'Restart Flaim Systems' on the ipad to get back into main operating mode

### Note

If the software alerts that the headset is not visible, please move it briefly to wake it up and try again.

## 7. Running a scenario

This section highlights how to select and run a scenario from the 'Select Scenario' tab.

### 7.1 Select Training Mode

By default, single user mode is selected. When running FLAIM Trainer without a second operator (FLAIM Trainer Duo) this mode should be left unchanged.


When depressed, the left button under 'Select Training Mode' cycles through **Single User - Multi-User**.

Single User is used for all scenarios where one operator is using the FLAIM Trainer system. No further selections need to be changed as the user will use the nozzle by default.

- Multi-user sets the primary operator to use the nozzle while the secondary user defaults to the VIVE controller. Multi user launches the scenarios on both the primary and secondary sets automatically.

By default and standard for Single User Mode is the nozzle/branch.

**Figure 34:** Simulations Tab

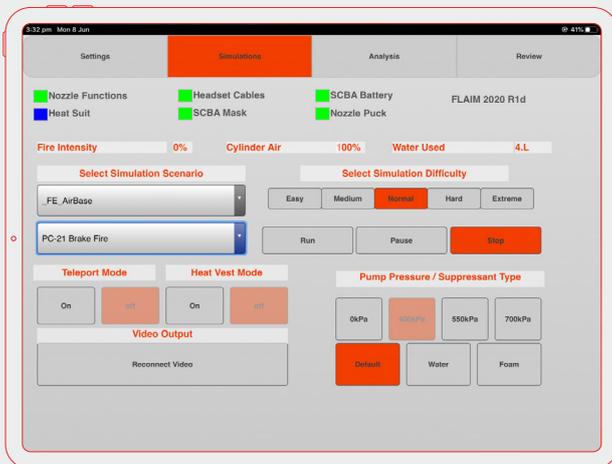

**Figure 35:** Select training mode



## 7.2 Select Simulations Tab

The Simulations Tab is used to control the trainee's experience. Launching scenarios, enabling heat and enabling teleport are all controlled within this tab.

Under the Simulations Tab there is a list of all installed scenarios. Once selected, the user can then click 'Run' to launch the selected scenario. Scenarios may take up to 20 seconds to launch.


To end the current scenario, push 'Stop'.

Also on the Simulation Tab are the instructor controls that enable/disable teleport and enable/disable the heat suit temperature output.


### Pump Pressure

Pump pressure and by extension, hose force can be controlled by the Pump Pressure. Default pump pressures are 400kPa, 550kPa and 700kPa. Note that when 700kPa is selected there is significant force applied to the user and this setting should not be used for more than a few minutes. The hose reel system is not designed for long duration operation at 700kPa.

**Figure 36:** Select Simulation Scenario

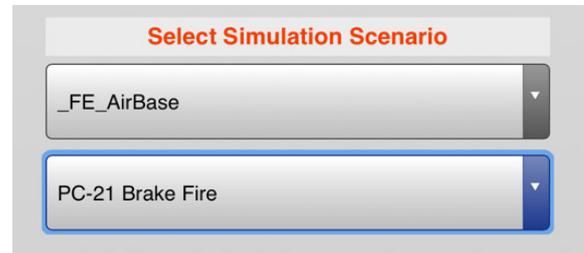

**Figure 37:** Select Teleport Mode and Select Heat Vest Mode

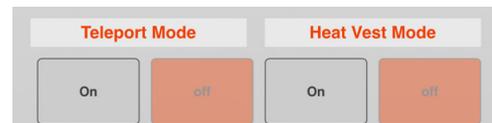

**Figure 38:** Select Pump Pressure



**Figure 39:** Analysis Tab

The instructor can monitor the system’s battery power levels, Heat Suit temperature and the trainee’s air usage on this tab.




## 8. After Action Review

The Review Tab on the iPad is used by the instructor during simulations to assess student learning outcomes.

This section allows an instructor to:

- Add student details (name and student number)
- Save training records (saved to desktop of SCBA computer by date, time and student name)
- Tick off standard competencies as supplied by FLAIM
- Add or remove learning outcomes that are saved for future training sessions.

Please contact FLAIM Systems at [info@flaimsystems.com](mailto:info@flaimsystems.com) to understand options for saving this data to your organisation's learning management system.

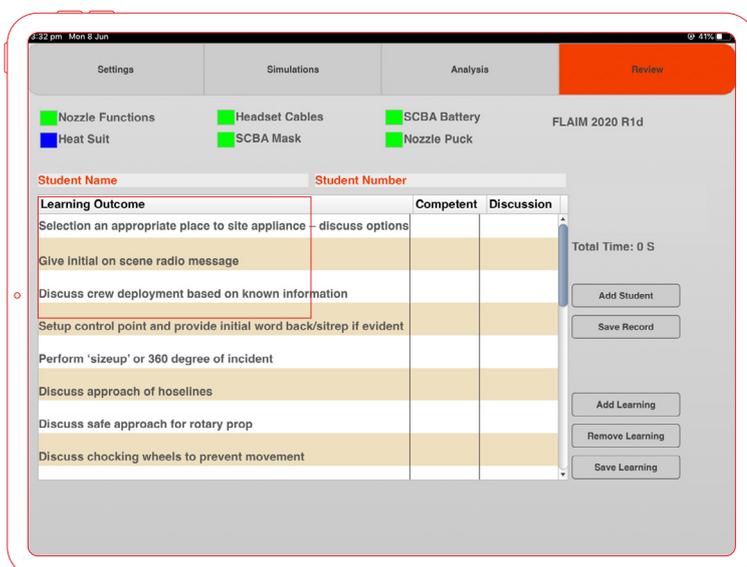

**Figure 40:** After Action Review Tab

The instructor can monitor firefighters during and after training.

## 9. Fault finding

The following table contains a matrix of possible faults and solutions.

### Fault

**The SCBA set does not turn on**

### Solution

Ensure that the battery is connected firmly and is fully charged (by checking on charger or pushing the battery status button on the Milwaukee battery).

Use a second battery to confirm.

Press the power button and confirm that it is depressed and that the power light on this switch light comes on after ~5 seconds.

---

**The SCBA set turns off or restarts**

Ensure that the battery is fully charged

Ensure that the operating temperature does not exceed 30 degrees Celsius / 85 degrees Fahrenheit.

---

**iPad app doesn't respond to button presses**

Restart the app by double clicking the home button and swiping up. Re-run the app from the home screen. Ensure that the hose reel and SCBA are turned on.

## **Fault**

**iPad app doesn't load or shows a white screen**

## **Solution**

The SCBA isn't turned on or hasn't finished loading (~40 seconds)

The hose reel is not powered

Restart the computer and the iPad app

---

**I can't see my nozzle**

Ensure that the tracking puck is turned on and showing a green LED.

If showing a blue flashing light, hold the power button for ~5 seconds until it turns off and turn it on again.

If this doesn't work, try re-pairing the puck (see adding hardware section).

If the puck is showing a red LED then it must be recharged

---

**Headset isn't tracking/  
headset is grey**

Ensure that the two trackers are installed correctly and powered on. Each tracker battery should have at least 1 red light.

Make sure that the headset has a clear line of sight to at least one tracker at all times.

Restart the SCBA if tracking doesn't return.

---

**Tracking is off or I feel  
tall/short**

Ensure that the trackers have not been moved.

Redo room setup making sure the headset is on the ground.

---

**No force feedback in  
hose reel or force is  
weak.**

Ensure the hose reel is powered.

Ensure the nozzle isn't in 'flush' setting.

Ensure pump pressure is set on iPad app.

## **Fault**

**Nozzle doesn't show correct water pattern or show water at all or pattern change is delayed**

## **Solution**

This fault can be caused by a number of factors.

Restart the nozzle controller (V2) in setup screen.

Check AAA batteries in nozzle.

Ensure tracking puck is firmly seated on nozzle.

Ensure no large RF generators or WIFI access points are too close to the system.

Restart the SCBA.

Disable heat suit and try with only the nozzle.

Re-pair the nozzle as shown in 'Adding New/Replacement Hardware).

---

**Instructor view does not show on TV**

Ensure the HDMI receiver is powered and shows a white or green power light.

Ensure correct source is selected on the TV/Projector.

Move the SCBA closer to the receiver.

This system is an off the shelf video sender and is susceptible to RF noise. Change locations or restart SCBA if picture is not restored by trying the above.

Ensure correct power supply and USB lead are used to power the system. Incorrect power supply can cause intermittent loss of video.

For FLAIM Trainer Duo systems, please ensure that the correct transmitter has been selected.

Restart the SCBA

---

FLAIM Systems maintains a support team via email at [support@flaimsystems.com](mailto:support@flaimsystems.com) and will respond within 24 hours for any further technical issues.

# 10. Battery charging

## Safety Advice

FLAIM Trainer has a number of batteries that must be charged and maintained for optimal usage. It is critical that all batteries are checked for damage before and after use and before and after charging.

If any battery shows signs of damage or swelling, then please dispose of safely.

Lithium polymer batteries can pose a fire risk if improperly stored, charged or maintained.

Please treat them with respect and only charge them under supervision in a safe area.

Failure to manage batteries may result in damage to FLAIM Trainer.

### 10.1 Main battery charging

The main battery is connected to the charger by sliding it into its charge bay. The main battery should be fully charged within ~60 minutes and last ~60-70 minutes of solid use.

### 10.2 Tracker battery charging

The tracker batteries are charged by removing them from the tripods and connecting them in turn to the supplied charger. The tracker batteries take ~1 hour to charge and should last a full day of operation or more.

**Figure 41:** Main battery charger connection



**Figure 42:** Tracker batteries connect to charger



## 10.3 Nozzle battery replacement

The nozzle batteries are non-rechargeable standard off the shelf AAA batteries **Figure 43**. They can be replaced when the nozzle fails to connect.

## 10.4 Nozzle puck charging

The nozzle puck is charged via a micro USB cable supplied in the kit. This USB cable can be connected to a USB power brick or the USB port on the left side of the battery charger. When fully charged, the power light should show a solid white colour. The nozzle puck should last ~8hrs and charge within 1 hour.


## 10.5 iPad charging

The iPad should be charged using the included lightning cable after each use.

**Figure 43:** Nozzle batteries behind tracking puck



**Figure 44:** Nozzle puck charging via micro USB cable

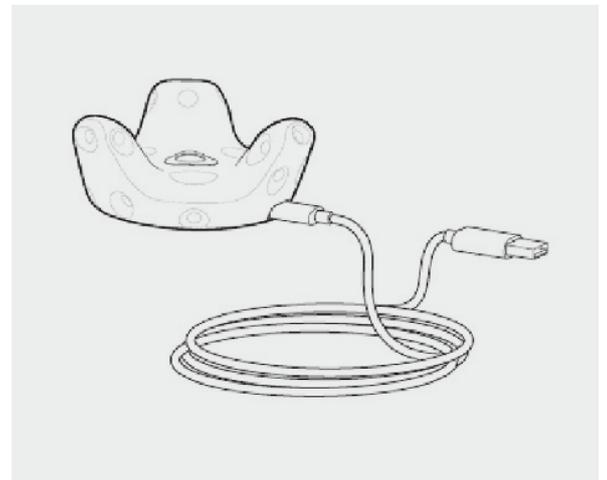

## 11. Safety

Safe use of the FLAIM Trainer is paramount. The following safety guidelines should be followed to ensure that trainees and support staff are protected at all times.

### Safety Advice

FLAIM Trainer is only to be used for firefighting training of emergency services personnel and first responders, workforce, customer and community engagement.

FLAIM Trainer must not be used for operational or actual firefighting, live fire training using gas fired, carbonaceous or other fuelled fire training, in wet conditions or where exposed to direct water or other firefighting liquids and agent streams.

## 11.1 Travelling with batteries

The batteries used by the FLAIM Trainer system are designed to be transported in their protective case when travelling by road.

When travelling by air, most airlines require the batteries, for the trackers and SCBA to be carried on board the aircraft as part of hand luggage. Airlines generally require the terminals to be taped to prevent in-advertent short circuit.

Please check with your airline before travel, as some airlines require pre-approval for batteries of this capacity to travel.

**SCBA Battery Capacity: 18V 12Ah 216Wh x 2**

**Tracker Battery Capacity: 12V 4Ah 48Wh x 2**

## 11.2 Charging batteries

All batteries should be charged under supervision with appropriate fire protection in place (Dry Chemical Extinguisher).

Batteries should be charged in an open area, ideally on a cement or non-combustible surface, away from ignition sources and flammable objects. Batteries should not be charged when hot and may require a 30 minute cooling period when removed from a SCBA before charging is commenced.

The included batteries have a thermal safety mechanism built in and will not charge if too hot. Please ensure that only genuine Milwaukee, 6Ah, 8Ah, 9Ah or 12Ah batteries are used. FLAIM cannot guarantee 'no name batteries' and will not warrant FLAIM hardware when incorrect batteries are used.

## 11.3 Weight

The SCBA sets weigh ~11kg and should not be worn by users with back problems. Generally, if users are not able to wear SCBA operationally then they should refrain from wearing the FLAIM Trainer.

When performing community engagement small children and the elderly are discouraged from using the system. Please contact FLAIM Systems to ask about the 'FLAIM Trainer LITE' system for these use cases.

When travelling with the system care should be taken when lifting the units and their travel cases.

Cases weigh between 19kg/42lbs and 27kg/60lbs depending on fit out.

## 11.4 Reel/Hose line forces

The forces delivered by the haptic hose line can be significant and are equivalent to real world hose forces. Care should be taken to ensure that the hose line system is appropriately attached to a wall or anchor point and that the user is prepared and supported for the force to be exerted when operating the nozzle.

## 11.5 Heat

The heat suit is capable of producing temperatures of up to ~70 degrees Celsius. The vest should be worn under PPE but over a suitable cotton t-shirt or similar. Hot temperatures are only created when in close proximity to a virtual fire for a very short period of time so as to ensure no lasting discomfort to participants. Heat can be removed instantly by disconnecting the magnetic heat suit power connector or by clicking heat off in the iPad application.

## 12. Maintenance

### 12.1 SCBA mask

The half facemask should be removed from the SCBA backplate and regulator assembly after each use and cleaned as per departmental decontamination standard operating procedures. Ensure that the mask is thoroughly dry before re-attaching to the FLAIM Trainer system as damage to the breath detection system can occur.

### 12.2 Batteries

Batteries should be charged after use and should never be left connected to the SCBA sets for extended periods. Batteries should be inspected before and after use and disposed of and replaced if swelling, cuts, nicks or damage to the pack is detected.

The batteries used by FLAIM Trainer are high capacity and should be treated with respect. Lithium Polymer batteries if punctured or treaded incorrectly can cause fire and injury.

### 12.3 SCBA

Straps and the harness should be stowed appropriately before putting on to ensure longevity of the SCBA backpack.


### 12.4 Head mounted display (HMD)

The HMD should never be left hanging from its cord as damage can occur. The HMD is robust but should only be cleaned with lens wipes as use of a cloth to clean lenses may scratch them and distort imagery.

### 12.5 Heat suit

The heat suit system may be hand washed after the removal of the electronics box and heating pads.

FLAIM Trainer has no user serviceable parts inside and if a subsystem is damaged or fails to operate as expected, please contact your nearest FLAIM distributor or agent for replacement components.

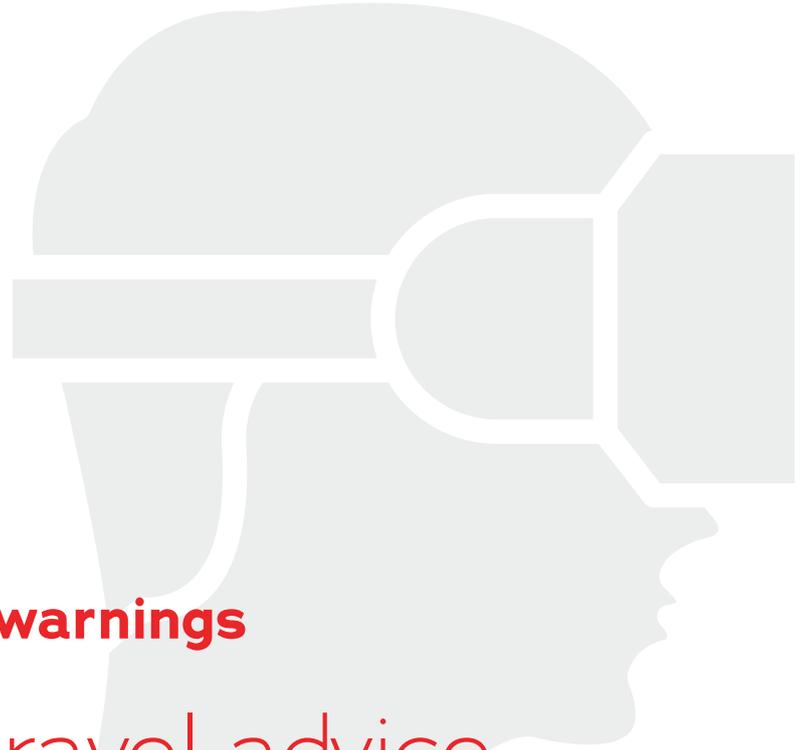

### **13. Travel advice and warnings**

In addition to travel advice about batteries (see Safety – Travelling with batteries), when travelling with the FLAIM Trainer system on aircraft it is important to notify check-in staff about the equipment.

When X-rayed, the SCBA sets look like operational sets and as such airline staff often assume that the sets are pressurised. In order to reduce travel delay it is best to show/inform staff prior to check in. All batteries should also be removed from the support case and carried on board the aircraft.


## 14. FLAIM Trainer Duo Setup

The FLAIM Trainer Duo setup is identical to the single user system. Two units are placed in the tracking area, side by side, and calibrated using the standing room setup. As there are two users working in close proximity it is important that they stay within their own safety zones (depicted as a blue circle on the floor) to ensure that they do not collide with each other in the 'real' world.

One HDMI receiver collects the signals from both SCBA sets and an instructor can choose which video feed to monitor using the 'Select Master Set 1' or 'Select Slave Set 2' in the Scenario Tab on the instructor iPad.

Both SCBA sets should be launched using their respective FLAIM Set 1 and FLAIM Set 2 buttons on the iPad.

**Figure 45:** FLAIM Trainer Duo remote control for switching video sources

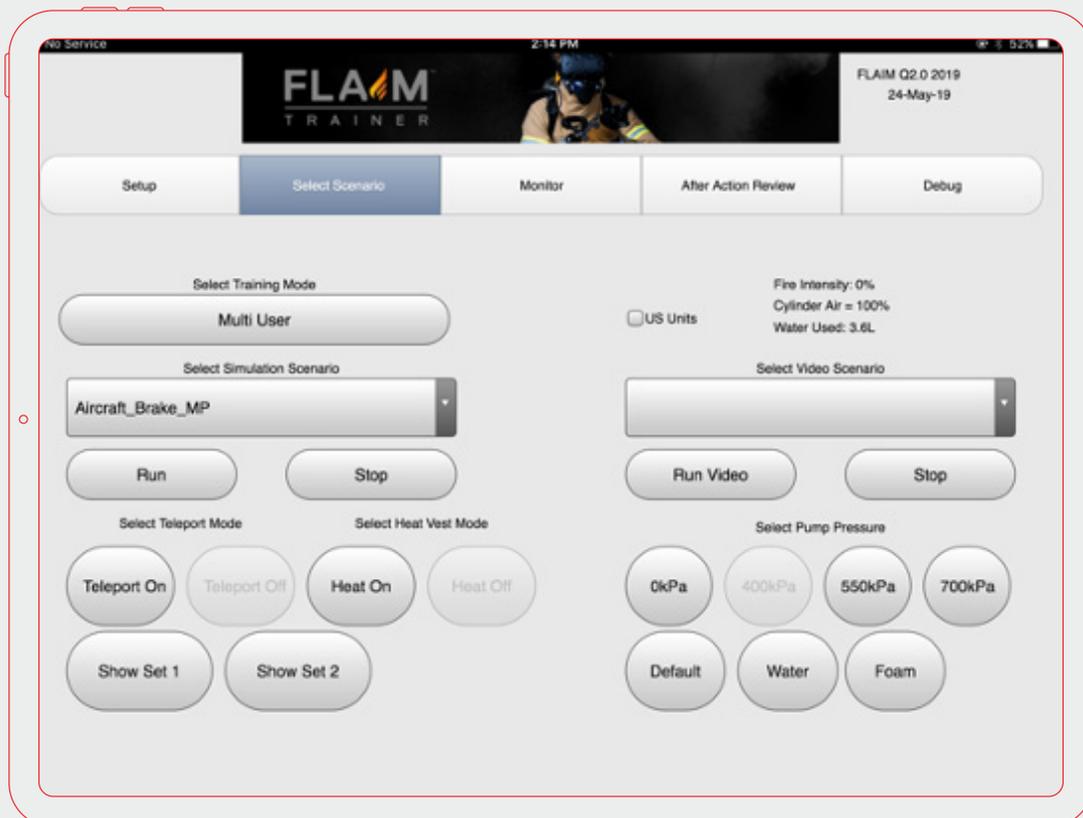

## 15. Adding new/replacement hardware

This section should only be required if you need to replace a damaged piece of hardware. FLAIM Trainer kits ship fully paired to work out of the box.

### 15.1 Connecting hardware

You can connect new hardware by using the iPad 'Settings Tab' and selecting 'Advanced Settings'. This tab allows users to re-pair HDMI receivers, nozzles/branches and heat suits. The advanced settings also allow system configuration including:

- Change of units Litres/kPa or Gallons/PSI
- Toggle SCBA dirty mask effect
- Change of iPad and simulation scorecard language (note After Action Review text modification will require iPad system language change)
- Maximum heat suit temperature
- Using the system without hose reel and Nozzle/Branch (Vive controller).

Changes to configurations in Advanced Settings should not be performed unless under direction of FLAIM Systems or a reseller (with the exception of language settings, and SCBA mask visibility). Misuse may result in unpredictable system operation. After closing the advanced settings window, normal operation of the FLAIM Trainer can be achieved by clicking 'Restart FLAIM System'.


### 15.2 Re-pairing the tracking puck

If the nozzle tracking puck is accidentally placed into pairing mode you will see a blue flashing LED, the puck light remains blue during operation and the nozzle isn't depicted in the training scenario, it may need to be 're-paired' to establish connection with the FLAIM Trainer.

**Step 1.**

Using the mouse, right click on the SteamVR window (Figure 45) and select Devices-Pair Controller.

**Figure 46:** SteamVR Software

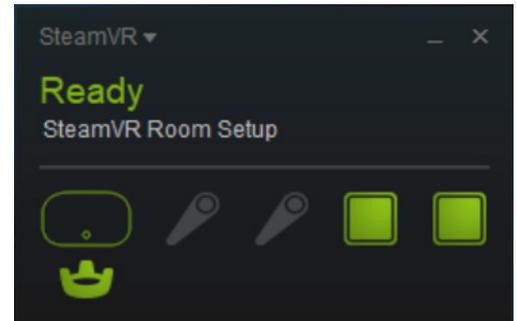

**Step 2.**

Ensure that the tracking puck is charged and turned on (blue light). Press and hold the power button again for 2 seconds and the blue power light will start flashing indicating that it is in pairing mode. Within a few seconds 'VIVE Controller Paired!' (Figure 46) should be displayed and the power light on the tracking puck should be green. You can now click 'Done' and start your scenarios.

**Figure 47:** Looking for Tracking Puck and Paired!



## 16. Further support

Once again thanks for choosing FLAIM Trainer as a part of your training solution.

For further support, please contact your local distributor or agent in country during business hours or email [support@flaimsystems.com](mailto:support@flaimsystems.com)

